




A FORKLIFT MUST BE USED BY A TRAINED DRIVER TO SAFELY REMOVE THE CABINET OFF THE PALLET

INSTRUCTIONS FOR REMOVING A 9210 UCOUSTIC CABINET OFF A PALLET USING A FORKLIFT TRUCK

1 ENSURE PALLET IS PLACED ON A FLAT EVEN SURFACE. REMOVE THE STRAPS AND THEN THE SIDES OFF THE CRATE (USING A MALLET, *HITTING AWAY FROM YOU AND THE CABINET*) LEAVING THE BUBBLE WRAPPED CABINET SAT ON THE PALLET



2 TO REMOVE THE CABINET FROM THE PALLET, ENSURE FORKLIFT IS FACING THE FRONT OR REAR OF THE CABINET (NOT THE SIDES) AND CAREFULLY PLACE FORKS THROUGH THE APETURE UNDERNEATH THE FRAME AND GENTLY LIFT AWAY FROM THE PALLET ENSURING THE CABINET IS PROPERLY BALANCED ON THE FORKS. IT IS ADVISABLE TO HAVE A PERSON STANDING EACH SIDE OF THE CABINET TO HELP BALANCE IT DURING LIFTING TO PREVENT A TOPPLING HAZARD

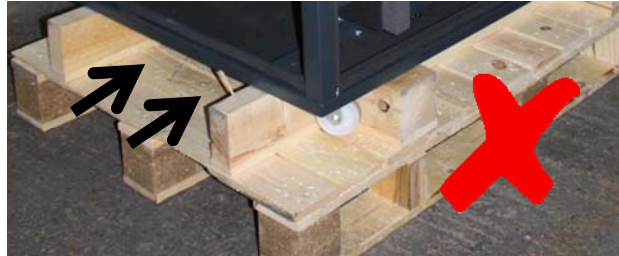

INSTRUCTIONS FOR REMOVING A 9210 UCOUSTIC CABINET OFF A PALLET WITHOUT USING A FORKLIFT TRUCK

1 ENSURE PALLET IS PLACED ON A FLAT EVEN SURFACE. REMOVE THE STRAPS AND THEN THE SIDES OFF THE CRATE (USING A MALLET, *HITTING AWAY FROM YOU AND THE CABINET*) LEAVING THE BUBBLE WRAPPED CABINET SAT ON THE PALLET



2 WHILE CABINET IS STILL ON THE PALLET, REMOVE ALL THE PACKAGING & BUBBLE WRAP AND THEN PROCEED TO REMOVE THE FRONT AND REAR DOORS PLUS THE SIDE PANELS TO ALLIEVIATE THE WEIGHT OF THE CABINET WHEN REMOVING FROM PALLET.



NB. ENSURE DOORS AND SIDE PANELS ARE PLACED AGAINST A SOLID WALL ON A CLEAN EVEN SURFACE WHEN REMOVING FROM CABINET

3 ONCE ALL THE CLADDING HAS BEEN REMOVED THE FRAME SHOULD BE LIGHT ENOUGH FOR 2-3 PEOPLE TO LIFT OFF THE PALLET



THE FRAME SHOULD BE SITED WHERE YOU WANT IT TO REMAIN BEFORE REPLACING THE CLADDING.